



Diagram and Instructions

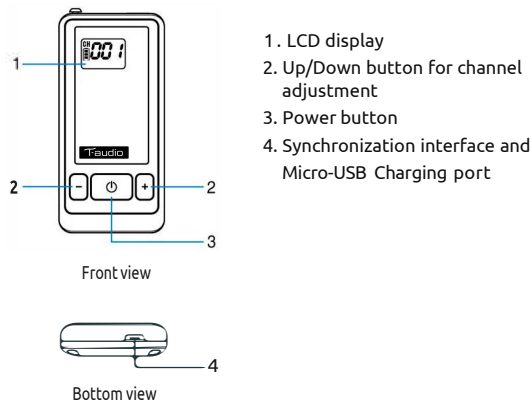

Operating Instructions

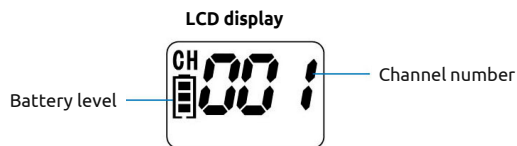

Power On and Off the SYNC KIT

- Press and hold the power button for 2 seconds to turn the power on. The LCD display will illuminate and retrieve the previously synchronized channel number.

Select the channel

- Press or button to select your desired synchronization channel

Select mode

After synchronization is completed, select off mode or pre-boot mode. To choose between modes, press and hold the and buttons simultaneously for 3 seconds, the channel number on the LCD display will switch between solid black and flashing.



Solid black : Off mode

The new channel number will appear on the tour guide device for 5 seconds after synchronization is completed and it will then shut off.



Flashing : Pre-boot mode

The new channel number will appear and remain on the tour guide device after the synchronization is completed. When unplugging the device from the charger, it will power on automatically.



Synchronization starts

- Place the tour guide devices which need to be synchronized into the charger.
- Set the new channel number and startup status on the sync-kit, and then insert it into any slot of the charger.
- The LEDs on the charger will flash 5 times when synchronization is taking place. The LEDs will turn to solid when synchronization is complete.

Note : the solid Green or Red LEDs on the charger now indicate the tour guide systems' battery charging status.


⚠ If the charging slot indicator is on but not flashing during synchronization, this means that the synchronization has failed. Please check for possible causes:

- SYNC KIT or tour guide device is not fully inserted into the charging slot
- The new desired channel number set on the SYNC KIT exceeds the channel range of the original tour guide device


How to power off or charge LX200K after synchronization

- LX200K will be switched off after 5 minutes if none of the buttons are being pressed
- If the LX200K is left in the charger slot after the synchronization process, it will be switched off and start charging.


Step 1: Place the tour guide transmitters and receivers in the charger

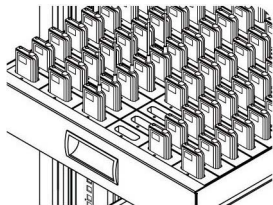

Step 2: Adjust your desired channel on the LX200K kit

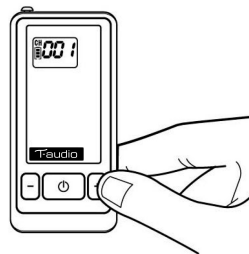


Step 3: Decide the mode of the tour guide system once synchronization is completed. Select off mode or pre-boot mode.

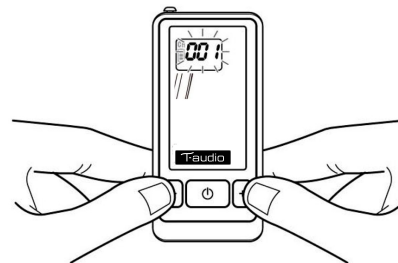


Solid black : Off mode
Flashing : Pre-boot mode

Step 4: Place the LX200K into any slot of the charger

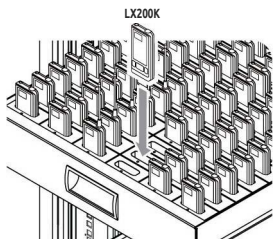

Step 5: LEDs on the charger flash 5 times, indicating synchronization is taking place

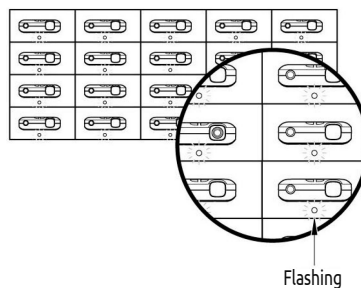

Step 6: LEDs turn to solid and now indicates the battery charging status. The synchronization process is completed and you are ready to use your system.

