 
 


Diagram and Instructions

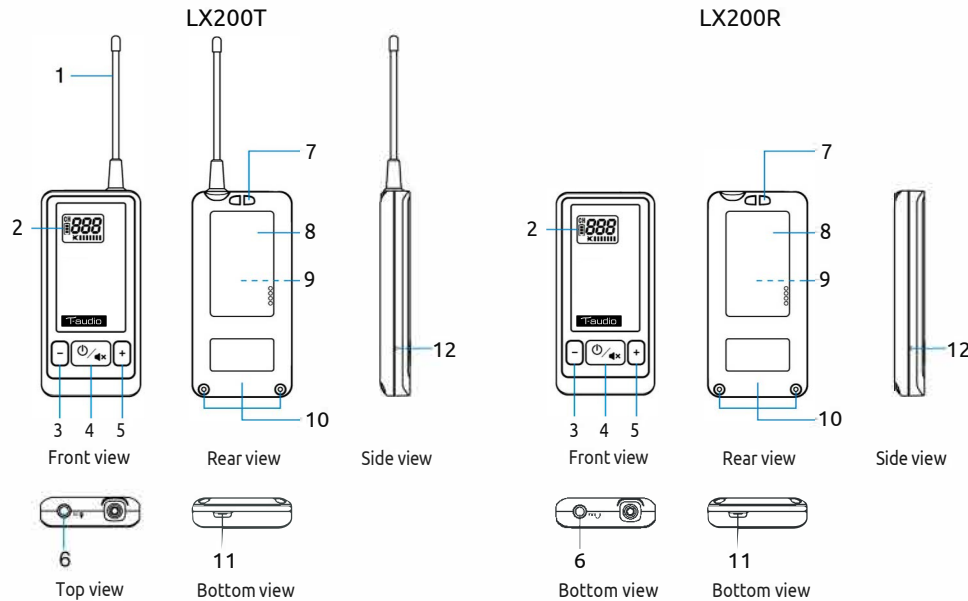

1. Antenna (for LX200T transmitter only)
2. LCD display
3. Down button for channel and volume adjustment
4. On / Off / Mute / Set button - transmitter
additional function for LX200T: ✖ to mute the audio signal
On / Off / Set button - receiver
5. Up button for channel and volume adjustment
6. Microphone / Headset input for transmitter
Headphone output for receiver
7. Lanyard connection point
8. Label area
9. Battery compartment and built-in Li-polymer battery
10. Lid of battery compartment and screws
11. Micro-USB charging port
12. Force Shut Down button

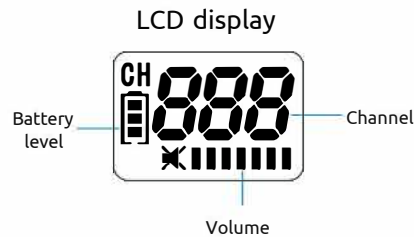

LCD Display Illustration

	LX200T transmitter	LX200R receiver		LX200T transmitter	LX200R receiver
	Channel change			100% battery remaining	
	Mute/Mic disconnect	Mute		70% battery remaining	
	Microphone volume level 4	Earphone volume level 4		30% battery remaining	
	—	No signal received		10% battery remaining	

Operating Instructions

Microphone and Earphone Connection

Connect the microphone to the 3.5mm socket on the transmitter and the earphones to the 3.5mm socket on the receiver. Make sure the connectors are properly inserted in place.

Power On and Off

- Press and hold the power button or for 2 seconds to turn on the system. The LCD display will illuminate and show the last used channel number to indicate: power on successful.
- Press and hold the power button or for 2 seconds. The LCD display will turn off to indicate: power off completed.

Note :

- Energy saving - receiver will automatically power off if no signal is received for 20min.

How to select a channel

The channel is preset to ^{CH} 001. If you wish to select a different channel, press and buttons simultaneously for 2 seconds. The icon starts flashing. Press or button to select your desired channel. Press or button briefly to confirm the selected channel or wait for approximately 55 seconds to automatically store the selected channel.
Note: Make sure that the transmitter and receiver(s) operate on the same channel. The receiver display will keep flashing when no transmission signal is being received.

Channel memory

LX200 automatically memorizes the channel number. It will set to the last used channel when turned on again.

Channel SYNC - Automatic channel synchronzation between transmitter and receiver

Within the same group, when you change the transmitter's channel number, the receiver's channel number is wirelessly synchronized to the new channel.

Reboot or Restart when the LCD display is Frozen or Stuck






 

In the unlikely event that your tour guide system becomes frozen and unresponsive, you can attempt a force shut down and then reboot/restart your guide system.

Follow these steps:







1. Find the "Force Shut Down" button (#12) recessed and located on the side of the device
2. Use a pencil or similar sharp object. Gently press and hold the button for 1 second, then release the button. The device will turn off. Turn on the device again and confirm that the configuration has been restored back to the previous settings.

How to adjust the volume

Transmitter: using the included LM-11 microphone

- Connect microphone to the 3.5mm socket on the transmitter
- Transmitter volume is preset at level 4 
- Press  or  button to decrease or increase the volume level. There are 4 adjustable levels from  to 
- Press mute button  briefly to mute the transmitter, press the same button  once again to recover.


 
 
 

 
Receiver:

- Receiver volume is preset at level 4 
- Press  or  button to decrease or increase the volume level. There are 8 adjustable levels from  to 
- The LCD display  indicates no volume (mute mode).

Volume memory

LX200T automatically memorizes the volume level. It will set to the last used volume when turned on again.

Battery Autonomy and Charging


- The battery icon displayed  gives an indication of the power level.
- When the battery icon is displayed as empty and flashing , this indicates low battery (only 10% battery remaining). Recharge the battery immediately via USB certified traveling charger (optional accessory) or the T-audio charger station. It will take approx. 7 hours to fully charge and provide approx. 20 hours of continuous operation for receiver and 16.5 hours of continuous operation for transmitter.
- While charging, the battery icon displays on LCD  →  →  →  back and forth.



Note:

- The transmitter or receiver will shut down automatically when charging is taking place. If you want to use the system while it's charging, simply press the power button again to turn the system back on.


Q&A

Q1 “” icon is displayed on Transmitter

ANS Check if the transmitter volume is muted or the microphone connection is not properly attached.

Q2 The content on the LCD display of my receiver is flashing

Ans This indicates that no transmission signal is being received. Make sure your transmitter is powered on. Both transmitter and receiver are operated on the same channel and same frequency.

 To ensure proper signal being received, set transmitter and receiver at least 30 cm apart.