

Installation and start-up instructions

Grand Carry	Bodet www.bodet-time.com	BODET SA 1 rue du Général de Gaulle 49340 TREMENTINES Tél: +33 2 41 71 72 99 Fax: +33 2 41 71 72 01	Ref : 606412ZE
---	-----------------------------	---	----------------


Upon receipt, always check the product for damage during shipment. If any is found, you may file a damage claim with the carrier.

Table of contents

1) General	5
2) Safety rules PROTECTIONS :	6 6
3) Description	8
4) Installation4.1 Mechanical installation4.2 Electrical connections	9 9 10
 5) Installation examples 5.1 Setting a 24V time distribution 5.2 Setting a DHF time distribution 5.3 Programming a RHF circuit 5.4 Install an option board 5.5 Set a 24V TBT output 	13 13 13 14 15 15
6) Keypad: Key functions	16
7) Main menu programming 7.1 Standby state 7.2 User menu 7.3 USB loading and backup 7.4 Adding DHF receivers 7.5 Bank holidays 7.6 Access code 7.7 Time and date 7.8 Dynamic radio 7.9 Language 7.10 Version	18 18 19 20 21 21 22 23 23 23
 8) Programming the circuits 8.1 Viewing the circuits 8.2 Programming the circuits 8.2.1 Add a program step 8.2.2 Delete a program step 8.2.3 Modify a program step 8.3 Deleting a program 8.4 Viewing the status of a circuit 	24 25 25 27 27 28 28 28 28
9) Manual testing of circuits	29

10) Programming in Holidays and Special Day mode	30
 11) Technician menu programming 11.1 Time synchronisation menu 11.1.1 Programmable time changeover 11.2 Setting the time base 11.2 Time output management menu 11.3 Relay setting menu 11.4 RHF circuit function setting menu 11.5 Function setting menu 11.6 "Delete all programming" menu 11.7 CPU software download menu 11.8 Factory setting restoration menu 	32 33 34 35 36 38 39 40 41 42 43
12) Priority of execution of programs	44
13) Alarm messages	45
 14) Options 14.1 Mechanical installation 14.2 Option board with 3 AFNOR outputs 14.3 Option board with 2 ASCII outputs 14.4 Option board impulse // 14.5 Option board with 2 serial outputs (24VDC power supply) 14.6 Option board with 2 serial outputs (48VDC power supply) 14.7 relay option board 14.8 Option board with AFNOR input 14.9 Three inputs option card 	46 46 47 48 50 51 52 54 55 56
15) Technical characteristics	57
16) What to do if? Check that	59



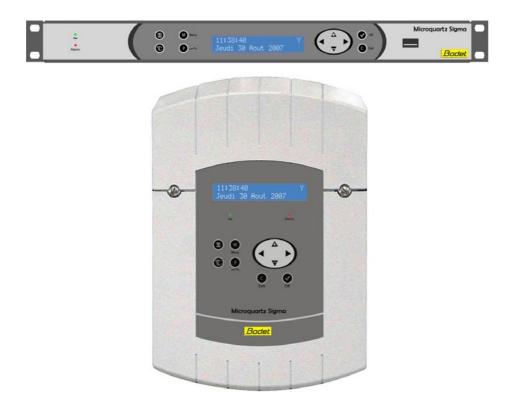

Installation and start-up instructions

1) General

The Sigma is a master clock which can be used to control receiver clocks and heating circuits, lighting, ringing, access at the doors of the building, etc.

The SIGMA has functions which can be programmed from the technician menu.

On first installation, it is essential to program the technician menu (see page 32) before the customer menu.

It is also essential when installing the SIGMA to program the technician functions in the order in which they appear in the menu.

This product must be installed in a residential, commercial or light industry environment.

Bodet declines all responsibility in the event of an accident resulting from use not in accordance with the recommendations of this manual.

CAUTION:

Any modification on the product renders the guarantee null and void.

Checking the equipment:

One SIGMA master clock. One USB key, One CD containing the PC software.

The CD supplied with your unit contains a program allowing you to carry out the programming. The programming can thus be carried out simply on a PC and transferred via the USB port of the Sigma (see "USB loading and backup", page19).

To verify the model of the master clock,

press the 💟 key.



2) Safety rules

• Installation and maintenance of this equipment should only be carried out by qualified personnel.

• If the SIGMA is connected to the 230 V mains power supply, its installation must comply with the European standard IEC 364 (NFC 15.100 for France).

PROTECTIONS :

• 110-230V version: the mains supply for this device must include a neutral phase circuit breaker of maximum 6 A C curve, rapidly accessible upstream from the supply.

• 24V DC version: the SELV 24 V power supply for this device must include a protection of maximum 6 A.

• 36-72V DC version: the SELV 36-72 V power supply (according to NFC 15-100) for this device must include a protection of maximum 6 A.

• A. Indicate on the labels the location of these protections.

• The circuit breaker must be switched off during maintenance operation. Refer to labels in the product.

• All cables must be attached either to the wall (wall-mounted version) or to the frame of the cabinet (Rack version) before being connected to the various terminals strips, to prevent any pulling on these terminal strips. In addition, the wires of each terminal strips must be attached to each other to maintain the various isolations if an initial fault occurs.

• The time distribution cables must not run alongside high power mains cables (to avoid interference with communication between the SIGMA and the clocks).

• The SIGMA must be attached (to the wall or on its support) before being switched on.

• The "RACK" models must be mounted in 19" cabinet. These components will provide mechanical, electrical and fire protection (only the front panel may remain accessible).

• IMPORTANT: before any installation, refer to the "technical characteristics" paragraph.

• Think of making a backup of your programming on the USB key. In case of incident (breakdown, thunderstorm...), you will just have to restore the backup to start the time distribution again.


Caution :

- In case of replacement of the CR2032 battery, it is IMPERATIVE to respect the polarity following the opposite indications.
- There is risk of explosion if the battery is replaced by a battery of incorrect type.
- Dispose of used batteries according to the instructions of the manufacturer.



3) Description

Wall box

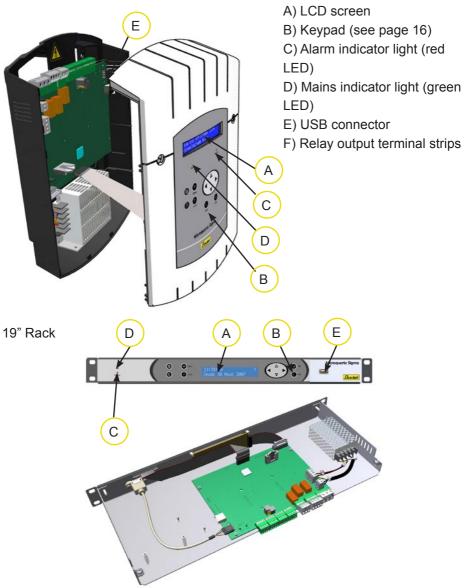


4) Installation

4.1 Mechanical installation

Choose a room with low temperature variations away from any source of electrical interference (contactors, motors, etc.).


WALL-MOUNTED version: Unscrew the 2 screws on the front, remove the cover (for the lower cover, press on the 2 clips (N) and slide it upwards). Disconnect the flat jumpers (Q) (be careful to connect them the same way round on reassembly) and attach the SIGMA to the wall. When your unit is in place, remove the protective film on the keypad.

RACK version: Install the rack in its slot in an electrical bay or cabinet.

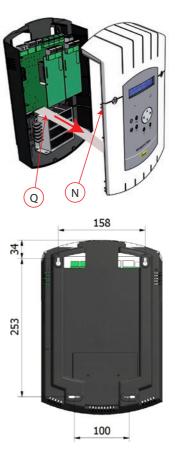

4.2 Electrical connections

Connect the cables (mains power supply, impulse line or AFNOR output and radio synchronisation input, depending on the model) to the corresponding terminal strips as shown in the figure below.

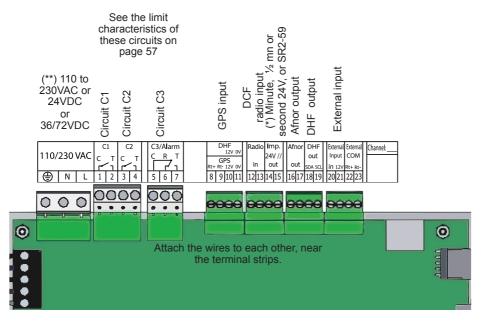


(*) See page 33, the "Time outputs" menu to set this output (Pulse minute, $\frac{1}{2}$ minute, second 24V or power TBT 24VDC 1A).

(**) Power supply depending on the version of SIGMA master clock.

<u>RACK version</u>: The mains power supply, impulse line and AFNOR output and radio synchronisation input terminal strips are directly accessible at the rear of the Rack slide-in unit.


Connection for D1D2 distribution :

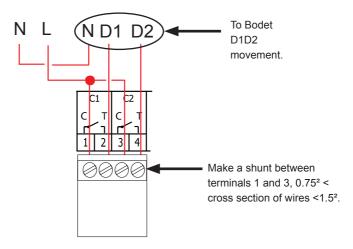

D1 D2 uses the relays of circuits 1 and 2

Circuits must be protected by fuse disconnector or circuit breaker 4A maximum. Indicate on the label above the terminal block the location of these protections.

Connecting a Melodys :

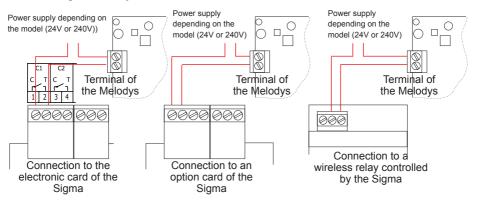


The Melodys can be connected directly to a relay output of the Sigma, an option card or a wireless relay.

See page 38 or 39 to assign the relay to the Melodys, and page 25 for programming.

Connection of DHF transmitter :


There are two types of DHF transmitters.

DHF transmitter "Time and relays", reference 907512, for SIGMA master clocks.

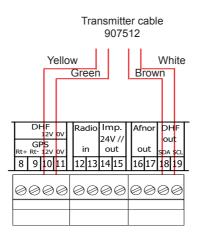

DHF transmitter "Time", reference 927230, for master clocks SIGMA, DELTA, ALFA, etc.

Note: the INIT mode must be activated directly from a DIP switch on the electronic card of this transmitter (not from the master clock).

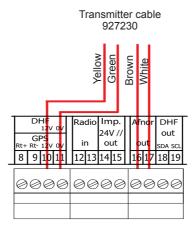

13

Apply the power to the SIGMA.

The 24V time distribution must be connected to the terminals 14 and 15.

Enter the technician menu (see page 32).

5.1 Setting a 24V time distribution

Enter the "time output" menu.

Select with the navigation keys :

minute, second),

- the impulse duration,

- check that all the slave clocks indicates the same time and enter this time.

Then, select "START" and validate with the key V. The slave clocks will get automatically synchronised with the time of the SIGMA.

When confirming, the catching-up of time will begin (fast impulses) or will wait if the catching-up time is superior to the waiting time.

5.2 Setting a DHF time distribution

The DHF transmitter must be connected (see page 12).

Apply the power to the SIGMA.

Enter the technician menu (see page 32).

Enter the "time output" option.

Select with the navigation keys :

- the transmission power (25, 125, 500mW).

- the channel (see instruction manual of the DHF transmitter),

- configure the SIGMA in INIT mode (all the DHF receivers (slave clocks, repeaters...) must also be in INIT mode),


- when all the slave clocks are synchronised, configure the SIGMA in START mode (automatic after 4 hours).


Then, validate with the key

Nota: when adding DHF receivers, you do not have to enter the technician menu, the "Add DHF receivers" option in the user menu is sufficient.

5) Installation examples

- the type of distribution (minute, 1/2







5.3 Programming a RHF circuit

Install the wireless relay.

Configure the address of the corresponding RHF circuit using the DIP switches from 5 to 8 (default address is 60).

Nota : several wireless relays can have the same address as long as control is the same (e.g. control of outdoor lighting).

In the technician menu, assign the relay, see page 39.

Program the circuit, see page 25.

Place the master clock in INIT mode, see page 20.

Check good running with the key ().

Nota: commands are sent to the wireless relays every hour, any time the programming is modified and when leaving the menu.

The update of the schedule is sent every hour to the wireless relays. A wireless relays save a 2-hour schedule. It must receive an update at least once both hours.

In the case of a bad reception, at the end of two hours of non-reception, no more steps are executed and the led of the relay becomes red.

5.4 Install an option board

Switch off the SIGMA, open it, see page 46.

Install the option board in the slot, fix it with the screws provided and put the label in front of it.

Connect the output or input lines of this board.

Close the SIGMA and switch it on.

For an option board of time synchronisation, see "Time synchro" technician menu (see page 33).

For an option board of time distribution, set the lines to "Start" in the "Time outputs" technician menu (see page 36).

Remark: in the "Time outputs" technician menu, "DEL" mode is used only to uninstall an option board from the master clock.

Attention, each Sound module counts for one extension card of the Sigma (maximum 2 for the Sigma P).

5.5 Set a 24V TBT output


The 24V must be connected to the terminals 14 and 15.

Switch on the SIGMA.

Enter the technician menu (see page 32).


Enter the "Time outputs" menu.

Use the navigation keys to select : TBT24V.



Caution : this output is protected ; if the current is too high, an alarm will go off and the output will stop supplying 24V.


6) Keypad: Key functions

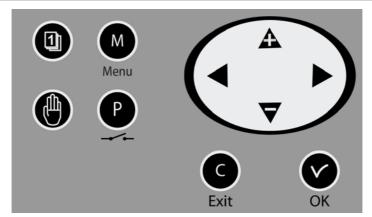

Keys	Functions
	Calendar key.
	Test key.
М	Menu key.
P	Program key.
C	Correction key.
Ø	Validation key.
◀, ▶,	A, Vavigation keys.

Note: exit from the menus is automatic if a key has not been pressed for one minute in the customer menu or for 5 minutes in the technician menu.

Synoptic diagram of the programming

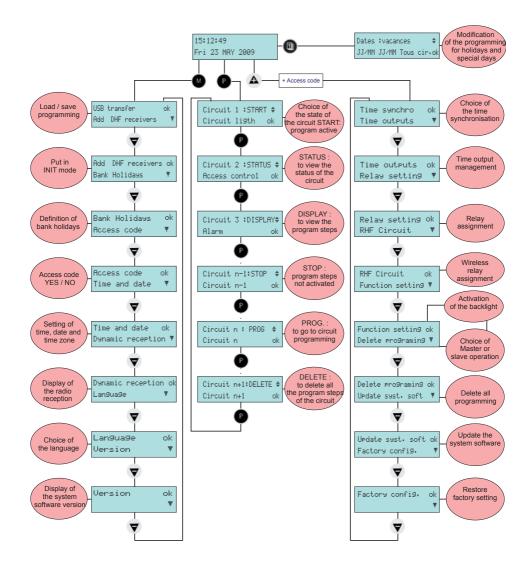

7) Main menu programming

7.1 Standby state

- In normal functioning the SIGMA displays the time and date :
 ψ is the radio signal indicator, which flashes if reception is poor.
- If a bank holiday, a special day or a holiday period has been programmed on this given day, the SIGMA indicates this via a display during the period in which it applies, with priority management.



10:54:32 BANK DAY Ψ Thu 25 DEC 2013



7.2 User menu

To access the user menu, press the menu key M.

Enter the user access code if necessary (see page 21).

Access the menu options using the \bigtriangledown key and validate with \checkmark .

The user menu options are :

- 1/ USB loading and backup,
- 2/ Add DHF receivers,
- 3/ Bank holidays,
- 4/ Customer menu access code,
- 5/ Time and date / time changeover,
- 6/ View dynamic reception,
- 7/ Language choice,
- 8/ System version.

USB	tra	nsfer	ok
Add	DHF	receiv	ers T

7.3 USB loading and backup

The SIGMA can load or back up its programming via a USB key. Before creating a new programming with the software, you will need to save the existing one on your USB drive, and transfer. Validate the option with the key . The following screen is displayed : Insert the USB key and validate with the key key.

To load a Program in the Sigma :

Validate the option with the \checkmark key, The SIGMA will search for the files available on the key (.sig extension). Select the file to be loaded using the \checkmark and \bigstar keys and validate with the \checkmark key,

The loading is then carried out. When it is completed, the unit displays :

To back up the existing Program of the Sigma :

Validate the option with the The SIGMA saves the file with an automatically allocated name in the format:

sauve1_DD_MM.sig (The number (1, etc.)

and the date are incremented automatically).

It is possible to rename this file from the PC, while keeping the same ".sig" extension.

Once the backup is completed, the unit displays:



-#


-

Restore backup

Create backup

Restore:Nest01.02‡ Confirm ok exit C

TRANSFE	RC	MPLE	TED
REMOUE	USB	KEY	





7.4 Adding DHF receivers


To place the SIGMA in "DHF initialisation" mode and enable synchronisation of a new clock, validate the initialisation mode with the

🔽 key,

The following screen is displayed :

Select "ACTIVE" mode using the \bigtriangledown and \clubsuit keys and validate with the \checkmark key.





The "init" display mode will appear alternately with the normal display during this period (4 hours).

It is possible, once the receivers DHF initialized, to stop this mode in this menu.

7.5 Bank holidays

Bank holidays saved via the PC software (maximum 20 dates) are managed by SIGMA.

By default, French bank holidays are active.

Bank holidays can be added and configured through the PC software.

Validate the option with the 🔽 key,

The following screen is displayed :

Choose YES / NO to activate the bank holidays calendar. Bank holidays will be considered to be Sundays (the weekly Bank Holidays ok Access code 🛛 🔻

Bank Holidaus:Yes‡ Sundau proglactivated ok

programming for Sundays will be used on bank holidays).

7.6 Access code

· 🗸 -

To enter or remove the SIGMA access code, validate the option with the 💟			
key,	Access code ok		
The following screen is displayed :	Time and date 🔻		
Choose the option you require and			
validate it with the 💊 key.	Access code: Yes 🛊		
The access code is fixed, \mathbf{A} , \mathbf{b} , \mathbf{A} ,	ok		

If there are 3 attempts with the wrong access code, an alarm message appears. The keyboard is locked for 10 minutes. It is possible to unlock it from the technician menu.

7.7 Time and date

To change the time or the date of the SIGMA, validate the option with the key,

The following screen is displayed :

You have access to the time zone selection.

The time zone selection allows you to

automatically manage winter/summer time changeovers.

If the zone is not available in the 20 pre-

programmed towns or time zones, select

"PROG" mode which is programmed in the technician menu.

"PROG" mode allows you to configure personalised time zone differentials and time changeovers.

By default it is in "PROG" mode.

The hour is flashing: set the hour using the

 \bigtriangledown and \triangle keys and move on to the minutes with the \triangleright key.

Proceed in the same way for the date.

Validate with the very key. If the time has been changed, the seconds are reset to 0.


When confirming, the catching-up of time will begin (fast impulses) or will wait if the catching-up time is superior to the waiting time.

Time	and	date	ok
Denam	ic r	recepti	ion 🖲



ime zone :PROG

(GMI)




7.8 Dynamic radio

To view the dynamic reception of the SIGMA, validate the option with the key,

If the reception is correct, the time and date are constructed automatically.

If the SIGMA is synchronised by a GPS antenna, the time displayed is GMT.

If the SIGMA is synchronised by a DCF antenna, the radio time is displayed.





10:12	
14/01/14	exit C

7.9 Language

To select the language of the SIGMA, validate the option with the \checkmark

🗸 key,

Select the SIGMA display language from the different options available.


The languages available are : FRENCH, ENGLISH, SPANISH, GERMAN, DUTCH, PORTUGUESE, NORWEGIAN, DANISH, ...

Lan9ua9e	ok
Version	₩
11	3H ‡ ok

7.10 Version

To view the version of the SIGMA, validate the option with the key,

The following screen is displayed :

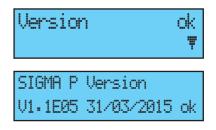

8) Programming the circuits

The Sigma P has three programmable (hard-wired) circuits allowing contacts (relays) to be activated. The option boards allow relays to be added. See circuit setting programming in the technician menu on page 38. The programming circuit menu is accessed by pressing the P key. The programming can be carried out simply on a PC and be imported via the USB port of the Sigma (see "USB loading and backup", page 19). The configuration of the circuits can be displayed at any time.

Assignment of the relays as a programming circuit or as a melody output is carried out in the technician menu.

Depending on this assignment, the relay number is therefore a control circuit (no. 1 to 3) or an HF relay circuit (no. 60 to 75) or an HF melody control circuit (no. 60 to 75 with a musical note pictogram).

On this screen, you see the first circuit, its status (Start or Stop) and the name of this circuit on the second line.

Circuit	01: ST	IRT \$
Circuit	li9th	dk

To view the various circuits, press the key

successively.

Use the \bigtriangledown and \clubsuit keys to select the mode of the circuit.

Description of circuit statuses :

- STOP : program steps not activated.
- START : program active.
- DISPLAY : to view the program steps without modifying them.
- PROG. : to go to circuit programming.
- DELETE : to delete all the program steps of the circuit.
- STATUS : to view the status of the circuit.

To change the name of the circuit, use the \blacktriangleright key. Use the \bigtriangledown and \blacktriangle keys to select the characters of this text and validate with the \checkmark key.

8.1 Viewing the circuits

Select the number of the circuit you wish to view with the kev.

Select DISPLAY mode with the $\mathbf{\nabla}$ and $\mathbf{\Delta}$ keys and validate with the key $\mathbf{\nabla}$ The display of the parameters is fixed and the step numbers flash.

		-
Cir-01:	Ø8:02:0	3 Ø3s
MTWIFS-	Weekly	01/12 🛊

The $\mathbf{\nabla}$ and \mathbf{A} keys can be used to scroll all the program steps.

Use the C key to exit from the menu at any time.

The program steps are displayed in the order of the times and then by type: weekly order, holidays, special and then PC step.

Steps 01 to 99 are indicated with the total number of steps; if the step is greater than 99 then only the step number from 001 to 500 is displayed.

8.2 Programming the circuits

Select the number of the circuit you wish to program, or modify the programming with the P key.

The circuits can be programmed in the following modes:

- Weekly,
- Holidays,
- Special,
- Public holidays,
- Additional step.
- Astronomical.
- Periodic.

Only the first 4 modes are accessible from the master clock. All the modes are accessible from the PC software.



If the first step is blank, the time flashes. Enter the time with the $\mathbf{\nabla}$ and \mathbf{A} keys



and then validate with the

Proceed in the same way for the minutes and then the seconds.

Enter the status of the circuit for this program step, choosing from ON, OFF, 01s (length in

seconds which can be set using the ∇ and \triangle keys) and DEL (DEL mode is used to delete the selected step), and then validate with the key.

If the circuit is a melody circuit, you have to select the melody number and the number of times it must be played (from 1 to 4).

The validation with the key allows to move on to the second line.

Select the days on which this program line will have to apply using the 💙 and \mathbf{A} keys and then select the mode, choosing from:

> WEEKLY: WEEKLY mode functions all year with application of bank holidays if programmed.

HOLIDAYS: HOLIDAYS mode stops weekly (and bank holiday) mode for a programmed period and activates the programming of the relays with HOLIDAYS mode

SPECIAL: SPECIAL mode deactivates weekly and holidays mode and starts the steps in SPECIAL mode.

PUBLIC HOLIDAYS: the Public holidays mode activates the program step only for the Public holidays; it has priority over the Sunday programming.

Validate the step with the kev.


If you have programmed a length, the value in seconds is stored and proposed for the next step.

NOTE: you can press the < key on the

first step of the program or on the time parameter to access the previous step or a blank step. On the last step, it allows you to add a new step or correct a previous step.

In this new step, press the **A** key to restore data from the first line of the previous step.

The program steps can be entered in any order. After validation, the system will reorganise the steps by time and then by type.





Cir.12:08:02:00 Waakii y 01/01.dk

31:08:02:00 M02/1

Weekly 01/01dk

Select the number of the circuit you wish to add a program step using the key.


key.

Select the PROG mode with the \bigtriangledown and validate with the \checkmark key.

Press the 🗲 key on the first step of

program to access to a blank step.

Program the step and validate with the v



Ρ

8.2.2 Delete a program step

Select the number of the circuit you wish to delete a program step using the P key. Select the PROG mode with the A and A validate with the key. Select the program step to be deleted with the key.

Select the DEL mode and validate.

Circuit	01: FROG	*
Circuit	li9th	ok

Cir-1:08:00:00 06s ‡ MTWIP5-Week19 03/05ok

Cir-1:08:05:00 DEL \$ MTWIPS- Waakiy 03/050k 8.2.3 Modify a program step

Select the number of the circuit you wish to modify a program step using the P key.

Select the PROG mode with the 💙 and A validate with the 🗸 kev. Select the program step to be modified with the 🗸 key. Modify and validate.

8.3 Deleting a program

Select the number of the circuit you wish to

delete using the P kev.

Select DELETE mode with the $\mathbf{\nabla}$ and $\mathbf{\Delta}$

keys and validate with the V key.

After validation, all the steps of the program are deleted.

8.4 Viewing the status of a circuit

Select the number of the circuit of which you w P key.

Select STATUS mode with the $\mathbf{\nabla}$ and $\mathbf{\Delta}$ keys and validate with the V kev. You will see the theoretical status of the programming circuit: ON, OFF, FORCED ON (if the circuit is forced manually to ON) or ACTIVE (if an action is in progress).

ish to view	the st	atus with	the
Circuit	12:	STHRT	\$

Access control Cimuit. 12:STATI K Access control ok

rk.

Circuit 12: STA Access control Circuit 12:DF Access control rik

Cir.1:08:00:00 06a 🛊 - Waskly 03/05ck

9) Manual testing of circuits

While the status of a relay is displayed, it is possible to test it.

Select the circuit you wish to test with the kev.

The system recognises its mode of assignment (relay or melody).

If the circuit is a relay circuit, start the test with the 🔽 key.

If you press it briefly (for less than 3 seconds), the relay is activated (ON position) for as long as the key is pressed.

If you press it for a longer period (more than 3 seconds), the relay is activated (ON position), and if you press it again the relay is deactivated (OFF position).

If the circuit is a melody circuit,

You can select the melody to be tested with


 $\mathbf{\nabla}$ and \mathbf{A} keys.

Start the test with the 🗸 key.

lf

If you press it for a longer period (m 3 seconds) = the melody is played you press it again.


,		, , ,	
nore than	Cir.618:	COCCA	TIDETIDA
loop until	CTL:OTH:	runuer	1001001



s control

nk

Cir.12: START



rk.

10) Programming in Holidays and Special Day mode

The programming of the SIGMA can be modified during a holiday period and for a special day.

To access this menu, use the 📵 key.

It is possible to enter dates for a holiday period or for a special day. By default, Holidays mode flashes.

Select Holidays or Special mode, and then

validate with the key.

The first date flashes.

Enter the dates with the \bigtriangledown and \clubsuit keys

and then validate with the 🗸 key.

:Hhlidæs 🛊 Dates 12925122 All Circ.dk

You can enter only one date-to-date series in Holidays mode on the unit, but it is possible to enter 20 periods with the software on the PC.


Only the next period can be accessed and modified using the Sigma keypad.

If only the start date is entered (= 1 day), then the start date is the same as the end date.

If the start date is not entered and only the end date is entered, the programming is not executed.

It is possible to choose Holidays or Special application mode on all the circuits in a single operation.

If the "ALL CIRC." Option is validated, the Holidays (or Special Day) mode will apply on all the circuits or melodies of the master clock.




If the "SELECT" or "ALL EXCEPT" option is validated, it is then possible to enter the circuit numbers concerned by this programming either by selecting them one by one or by omitting them ("all circuits except").



You must then select the circuits concerned.

Scroll all the circuits with the <



keys and validate with the \bigtriangledown and \bigstar keys if they are concerned by the holiday period.

If the "ALL EXCEPT" option is validated, only the selected circuits will not be affected by the Holidays mode.

Dates	1	Hol	idays	\$
10/02+25	Æ	: All	807	ok.

See page 25 for programming schedules.

CIR 🖪	12/28/218/	
circui	t heating c	k

11) Technician menu programming

The technician menu is accessible via an access code sent to the approved persons.

Press one of the navigation keys for a few seconds.

A code is then requested.



Time synchro

Time outputs

ok

The technician code is a fixed code, igta , igstarrow , iggstarrow , and igstarrow

You then have access to the technician menu,

Validate the required option with the key, or access the following options with the \bigtriangledown key.

The options in the technician menu are :

1/ Time synchro,

2/ Time output and DHF management

(impulses, D1 D2, Afnor, DHF) and output time zone differential,

3/ Alarm and D1 D2 relay assignment,

4/ RHF box assignment,

5/ Function assignment,

6/ Delete all programming,

7/ CPU hardware software download (.cod extension),

8/ Restore factory configuration.

Validate the required option with the 🔽 key.

To exit the technician menu, press the C key.


11.1 Time synchronisation menu

To configure the time synchronisation of the SIGMA, validate the option in the

technician menu with the 🗸 key,

The following screen is displayed :

Select the time synchronisation mode from the following options:



ok

Synchro: EXTERNA

Radio DCF,

Minute radio (mode used for countries

receiving the DCF radio signal but for which the time is different from Paris/ Berlin [only minute is synchronised, date and hour must be set manually]), **EXTERNAL** (mode used for synchronisation from a Sigma "Master" which transmits a GPS signal simulation from an ASCII extension card), **NONE**: if you choose to have no synchronisation, the radio pictogram is not displayed.

GPS,

AFNOR (requires an option board),

Auto (the master clock will select the best time source automatically; in that case, several time sources can be connected to the master clock; it will change time source in case of failure of one of them; the priority is given at first to AFNOR then GPS, DCF).

Remark : all the synchronisation options are proposed without checking that an antenna is connected (by default, the configuration is DCF mode).

In case of synchronisation input failure, an alarm message is sent. This alarm is triggered after 3 hours without synchronisation in Auto mode, after 24 hours in the other synchronisation modes.

Select the synchronisation mode with the \bigtriangledown and \blacktriangle keys and validate with the \checkmark key.

The following screen is displayed if "Prog" mode has been validated in the customer menu (see "Time and date", page 22) : This menu can be used to program non-

standard winter/summer time changeovers.



11.1.1 Programmable time changeover

This menu can be used to program the summer/winter time changeover dates.

It allows you to define the start of the winter period and then the start of the summer period.

To program the summer/winter time

changeovers, validate with the very key.

Arce time charce:Yest ok Last Sun OCT-03h ‡ Winter time ch. ok

- Set the start date of the winter period using

the ∇ and \triangle and \triangleright key.

In order:

The "Rank" flashes. The Rank designates the order number of the day of the week in the month¹ (1 to 5 depending on the month) (rank 5 always indicates the last week).

The "day" flashes.

The "month" flashes.

The "time" flashes.

Validate with the Validate with the

- Set the start date of the summer period using the \bigtriangledown and \clubsuit and \blacktriangleright . Validate with the \checkmark key.

4th	Sin	OCT	옾
		ck	

Last S		MAR.	02H	41
Summer	ti	me c	h. 1	ok

Whatever the synchronisation mode (radio GPS), this forces the automatic time changeover for radio DCF.

Set the start date of the winter period and then the summer period using \bigtriangledown and \blacktriangle and \blacktriangleright keys. Validate with the \checkmark key.

¹ Example of Rank calculation: the second Monday of the month or the second Thursday of the month have rank "2", while the last Tuesday of June has rank "5" as there are no more than 5 weeks in a month.

11.1.2 Setting the time base

This menu can be used to set the drift of the time base. This can be useful when the master clock has no external synchronisation.

To access this menu, you need to have selected "None" mode in the external synchronisation menu. Set the drift using the \bigtriangledown and \bigstar keys and validate with the \checkmark key. This correction is not taken into account when the master clock is synchronised.

11.2 Time output management menu

Programming by PC software allows the time zone differential of each output to be set with respect to the local time.

This menu can be used to view all the time outputs, modify their status (Start/ Stop), configure the DHF distribution in Init mode and configure the "impulse" and "D1D2" distribution.

This menu allows you also to configure the impulse output (Impuls 01) to provide TBT 24VDC (1A) power supply.

To go to the SIGMA time output management

menu, validate the option in the technician menu with the key,

The following screen is displayed :

You can view the different options and

change the values using the \bigtriangledown and \bigstar keys.

You can go through the different outputs by validating using the key.

The 3 outputs (Impulse 01, Afnor 02 and DHF03) are not programmable with a time zone differential.


The placing of a DHF output in "INIT" status

is active for 4 hours before return to START mode (The init mode display is alternating with the normal display during this period).


This menu can be used to set the power of the DHF output with a choice of 25mW / 125mW (by default) / 500mW and assign the system address from 1 to 4 (2 by default).

Buzzer mode allows you to activate a buzzer on the secondary transmitters in order to identify them.

For an "impulse" or "D1D2" output, the key can be used to go to the configuration menu.



Remark: the "D1D2" menu appears only if the relays have been assigned to





the D1D2 distribution (see "Relay setting menu", page 38). Use the key to move on to the next parameter:

Choice of impulse length.

Minute 24V standard impulse length (factory configuration) of 1.2 seconds variable from 0.5 to 5 seconds,

Second 24V standard impulse length (factory configuration) of 0.3 seconds variable from 0.1 to 0.9 seconds,

D1D2 standard impulse length (factory configuration) of 6 seconds, variable from 1 to 10 seconds.

Use the key to move on to the next parameter:

Choice of status ("Start"/"Stop").

Circuit stopping must be confirmed.


Use the C key to return to the previous screen.

Caution STOP mode ok on D1D2 output exit C

11.3 Relay setting menu

This menu can be used to assign the relays (D1D2 and alarm).

To go to the SIGMA relay assignment menu, validate the option in the technician menu with the key,




Rel. 3 alarm :Yes

The following screen is displayed :

By default, relay 3 (R/T relay) is assigned to

the "Alarm" output and relays 1 and 2 (T relays) to the D1D2 time distribution.

Nota: when no alarm is active, the alarm relay is set to ON.



To allow them to be used for another function

(control of heating, lighting, etc.), these relays must be set to No in this menu.

The relay option boards are recognised immediately on connection in the SIGMA. If the board is removed the programming is retained. It is deleted either with the PC software or in the technician menu with the "Del." option.

The assignment of the hard-wired relays is automatic. If a relay board is connected, the 3 relays will be defined according to the following logical output number :

Slot 1, relays 4, 5 and 6, Slot 2, relays 7, 8 and 9.

11.4 RHF circuit function setting menu

This menu can be used to assign the HF relays (16 address² maximum).

To go to the SIGMA relay setting menu, validate the option in the technician menu with the key,

RF Circuit	ok
Function setting	ng 🔻

The following screen is displayed :

Assign the RHF circuits to melody, relay or —- (not present) mode, MEL, REL, or, —. The RHF circuits are declared from 60 to 75.

14 A	۳.
ck	•

CIR.	RF:	69	Σ	REL	÷.
					ok

² Remark: several relays can be configured on the same address (for example for the same external lighting control).

11.5 Function setting menu

This menu allows you to define allocation of the external input of the mother board. It depends if you are using the master clock as master or slave unit. If the master clock is used as master, the external input will, for example, control circuitry to drive an alarm or buzzer.

If the master clock is used as slave, the external input (terminals 20 and 21) will detect changes in the alarm output of the master clock used as master. It can also be used to activate the backlight of the display screen.

To go to the SIGMA function setting menu, validate the option in the technician menu with the 🔽 key.

The following screen is displayed :

The master clock is configured in master mode by default.

If you configure it in "BACK-UP" (slave) mode

to assign it as a secondary master clock, then the external input (see below) displays BACK-UP and cannot be modified.

Select a circuit for the external input; the relays proposed are the relays which have been assigned.


In general, the external input will control a circuit dedicated to this alarm ringing function, relay ON

A contact connected to the external input can also control simultaneously several circuits. The circuits to be controlled must be specified in the PC software. Example: Circuit 1 + Circuit 2 + Circuit 60 + Circuit 13. Choosing the mode (START, LENGTH or FORCED ON) allows you to

configure the input for its functioning and the period of functioning in this state.

START: starts the programming of the circuit concerned the first time it is

pressed and stops it the next time (alarm type message on the display indicating the external input (circuit 1) and its status (ON, 40 OFF or START).



Function setting dk

)elete proGramin9 🛡

Function : BACK-UP \$

÷

ok.

OK.

CK.

Function : MAIN



nk.

11

LENGTH starts the relay in ON mode during the programming period HH MM SS; pressing Enter places the circuit in stop mode.

FORCED ON: forces the relay position whatever the programming (as in test mode); 1st pressing ON, 2nd pressing OFF. A switch can be placed on the output to

configure the status of the input as ON or OFF permanently.

The following screen can be used to activate or deactivate the idle screen backlight (by default, the backlight is lit, therefore value set to No).

11.6 "Delete all programming" menu


This menu can be used to delete all the programming.

To go to this SIGMA menu, validate the option in the technician menu with the key,

The following screen is displayed :

To delete, validate with the 🔽 key,

dk



Confirm delete

Pro9rams

Backlight off : ND





CTR.01

dk.


inc di

11.7 CPU software download menu

This menu allows you to update the program code in Flash.

In the www.bodet-time.com/en/support.html, click on "Downloads". Download the latest version of the programs into you USB flash drive.

To go to this SIGMA menu, validate the option in the technician menu with the key,



The code file (*.cod) must be on the root of the USB key and be the only ".cod" file.

Follow these steps before proceeding to the firmware update:

- 1- The USB drive should contain only the update version of the firmware.
- 2- The USB flash drive should contain only the update version of the firmware.
- 3- Turn the power back on and proceed with the update.
- 4- The code file (*.cod) must be on the root of the USB flash drive and be the only ".cod" file. Insert the USB key.

The following screen is displayed : to download, validate with the key,

The following screen is displayed : validate with the key,

Connect USB key then Press ok exit C
Reading USB in progress
Confirm syst. soft ok uedate C
The same Constraints

Stalo A1

Ŵ


The Sigma may not restart if these steps are not followed and the CPU card will have to be replaced.

A power failure during the update process will cause "System Failed" alarm. Again, the card must be replaced.

11.8 Factory setting restoration menu

This menu can be used to reinstall the initial factory setting.

To go to this SIGMA menu, validate the option in the technician menu with the key,



The following screen is displayed :

To reinstall the factory configuration, validate with the key.



12) Priority of execution of programs

Function	Priority
Circuit 1 in alarm, circuits 2 and 3 in time distribution (D1D2 tower clock)	1 (high)
Manual control of relays	2
Manual selection of a particular day (bank holiday / day before bank holiday / special day)	3
Programmed special day	4
Programmed holidays and bank holidays	5
Weekly program	6 (low)

When the Sigma is configured in one of the modes, all the program steps of the lowerpriority modes are ignored.

The "astronomical" and "periodic" modes, which are accessible only via software programming on a PC, do not have high priority (the astronomical, periodic and weekly modes, which will rarely be programmed together on the same circuit, are lumped together at low level).

13) Alarm messages

By default, the alarm configuration is :

- Activated: if an alarm is present, a message is displayed on the readout,

- Alarm relay: relay 3 is activated if an alarm is triggered.

If the display of alarms was selected by the installer at the time of configuration of the unit (See Alarm configuration, page 38), the SIGMA can display alarm messages :

If an alarm is active, the display alternates between the date and the alarm message.

Press the 🕨 key to view additional information on this alarm.

Example :

If several alarms are active simultaneously, the display is:

Press the key to view the additional information.

Press the \bigtriangledown key to view the following alarms.

The alarms are displayed in chronological order.

To acknowledge an alarm, press 🗸

Except for Afnor, DCF and GPS synchronisation failures where alarm is activated after 24 hours, other alarms are activated immediately. In the Auto mode, if there is no synchronisation from the primary source for more than 2h30, the Sigma switches to the next source and if there is still no synchronisation after 30 minutes then the Sigma activates the alarm.

10:54.32	ψ
Alarms)

Alarm :output 01 F Alarm :output 03 T

4v overload on 01

l2/07 10:54.32 dk

ess 🕜.

Alarm message	Meaning	
user code fail.	The user code has been entered three times incorrectly; the keyboard is blocked for 10 minutes.	
tech.code fail.	The technician code has been entered three times incorrectly; the keyboard is blocked for 10 minutes.	
battery failure	The lithium battery used to save configuration data is defective; replace the battery after making a backup of configuration data.	
24V bat failure	The 24V power supply is faulty; check the 24V battery backup.	
master failure	The main master clock is defective; control the main master clock. If a Sigma SWITCH is used, the stand-by master clock will automatically take over.	
senc. failure	The synchronisation source is faulty. In case of synchronisation input failure, an alarm message is sent. This alarm is triggered after 3 hours without synchronisation in Auto mode, after 24 hours in the other synchronisation modes.	
24V overload	The impulse line is overloaded; check the impulse line or reduce the number of clocks.	
24V pulse fail•	The impulse output is defective.	
Afnor failure	The AFNOR output is defective.	
Ascii failure	The ASCII output is defective.	
DHF failure	The DHF output is defective.	
series puls.fail.	The series impulse output is defective.	
SC. series Pulse	The series impulse line is overloaded or short-circuited.	
OC. series Pulse	The consumption on the series impulse line is too high.	
Circuit failure	The relay extension card does not answer; check the presence of the card.	
Afnor sync. failure	The AFNOR synchronisation source is faulty.	
Synch. wired failure	Loss of external synchronisation.	
SOUND failure	Loss of connection with Sigma Sound.	
External input failure	Loss of connection with the option card and the output number.	
Alert tri99ered	Indication that an Lockdown alarm has been triggered but not yet acknowledged.	45

14) Options


The Sigma can be fitted with 2 option boards to extend its capacities. The option boards are installed "cold" and are automatically recognised when the master clock is switched on.

The option boards are programmed with the software on PC.

Attention, one Sound module counts for one extension card of the Sigma (maximum 2 for the Sigma P).

14.1 Mechanical installation

WALL-MOUNTED version: Unscrew the 2 screws on the front, remove the cover (for the lower cover, press on the 2 clips (N) and slide it upwards). Disconnect the flat jumpers (Q) (be careful to connect them the same way round on reassembly) and install the option board(s) in the slots provided (X1) and (X2). Stick labels in front of the card. For relay cards, stick only the safety label.

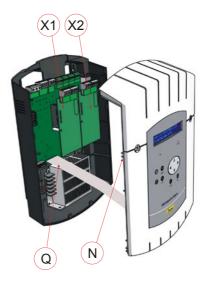

<u>RACK version</u> : Open the rack unit and install the option board(s) in the slots provided (X1) to (X2).

Stick labels in front of the card.

For relay cards, stick the safety label on the upper cover.

14.2 Option board with 3 AFNOR outputs



This option board does not require any software programming (by default the time is the local time defined in the Sigma and the line is stopped). Only the time zone differential and the state of the line (On / Off) is to be defined in the "Time outputs" technician menu (see page 36).

Connect the clock lines on outputs A, B and C.


Each output allows up to 50 clocks to be synchronised over 30 km.

Remark: the 3 outputs supply the same time. To have time distribution lines with different times, they must be programmed on different option boards.

If a short-circuit is detected on the line, an "AFNOR fault" error message is displayed (if the programming permits) on the readout of the master clock. If an AFNOR board occupies a slot, it takes the corresponding output numbers (Slot number + 3 (3 corresponds to the first 3 outputs already assigned)) with a letter ABC. For example, if a board with 3 AFNOR outputs is placed in slot 1, the outputs will be 4A, 4B and 4C (useful for alarm information).

Remark: in the "Time outputs" technician menu, "DEL" mode is used only to uninstall an option board from the master clock.

14.3 Option board with 2 ASCII outputs

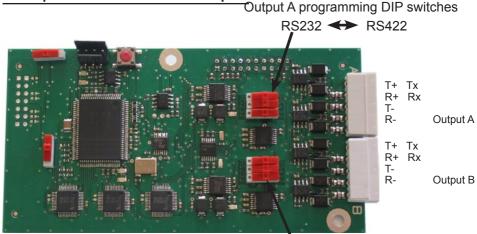

Output B programming DIP switches RS232 ↔ RS422

This option board has 2 ASCII outputs which can be configured in RS232 or RS422 (RS485) mode. To change the configuration, push the 3 DIP switches to the desired position.

Connect the lines on outputs A and B.


The ASCII frame, the speed and the number of bauds are programmed on PC using the software.

The default programming is periodic sending of a message to Bodet switchboard 1 every second, at 9600 bauds, on 8 bits with no parity and 1 stop bit, and the time is the local time defined in the Sigma.

Message content Example Thursday October 9, 2008 at 15h 12m 30s Standard 1 T'AA'MM'JJ'NJ'HH'MM'SS «x0D» Start of message: «x0A» 08:10:09:04:15:12:30 "end of frame" Standard 2 «x02» 00 JdS JJ/MM/AA "Start of message" 00 Thu 09/10/08 HH:MM:SS «0D» 15:12:30 "end of frame" ZDA GPS §GPZDA,HHMMSS,00,JJ,MM,AA "Start of ZDA GPS message" simulation 00.checksum.»x0D» «x0A» 151230.00.09.10.08.00.00*:6. "end of frame" GGA GPS §GPGGA.HHMMSS.00.code GGA 'Start of GGA GPS message" simulation checksum,»x0D» «x0A» 151230,00, IIII.II,a,yyyyy.yy.a,1,xx,x.x,x.x,M,x.x,M,x.x,Xxxx 70»end of frame» Prog. Your programming: see help button


Different transmission frames available :

Connection to a PC in RS232 mode




Maximum length from Sigma to P.C. with RS232: 15 m

Synchronisation connection to a PC in RS422

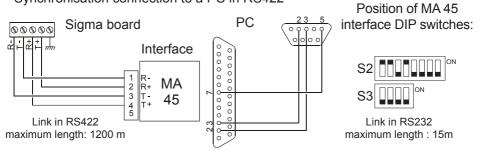


Synchronisation connection to a PC in RS485

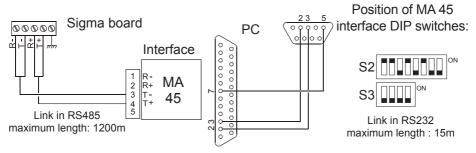

Set the lines to "On" in the "Time outputs" technician menu (see page 36).


Remark: in this menu, "DEL" mode is used only to uninstall the option board from the master clock.

14.4 Option board impulse //

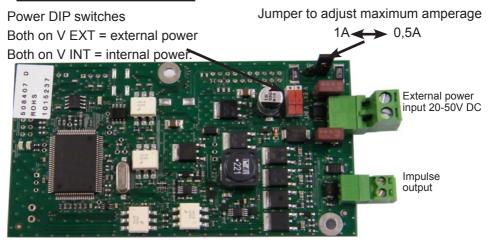

This option board does not require any software programming.


It allows to add a minute, ½ minute, second or SR2-59 impulse output or TBT 24V DC 1A power supply. See page 36, the menu of the time outputs to set this output. Use the two Power DIP switches to select internal (24V) or external power (from 20 to 50 V).



The jumper allows to adjust the maximum amperage of the output. Caution: the maximum amperage will depend on the version of SIGMA master clock.

Version of SIGMA	Power	Max. amperage
110V/240V	35W	1A total 0.5A cpu + 0.5A option or 1A option
24V version or external power of option board.	-	2.5A total 0.5A cpu + 2x1A option
TBT 36/72V	50W	1.5A total 0.5A cpu + 2 x 0.5A option or 0.5A cpu + 1A option

14.5 Option board with 2 serial outputs (48VDC power supply)

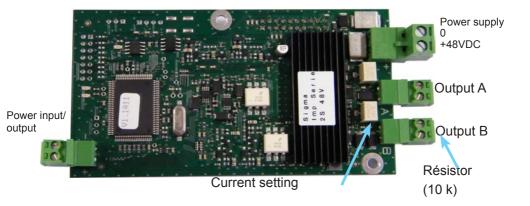

This option board does not require any programming. By default the time is the local time defined in the Sigma, with 1.2-second impulses, and the line is stopped.

Impulse generated from isolated external power 40-50V.


Connect the clock lines to the outputs A and B and, if needed, the power supply to the external power input. The terminal block on the left side of the card used to make the connection of the internal supply if other such option cards are used.

The current can be adjusted (from 50 to 100 mA) for each line, using the potentiometer next to each terminal strip.

The (10 K) resistor on each output terminal strip is designed to prevent the "line open" alarm message. It must be left if the line is not used.

Set the lines to "On" in the "Time outputs" technician menu (see page 36).

14.6 Option board with 2 serial outputs (24VDC power supply)

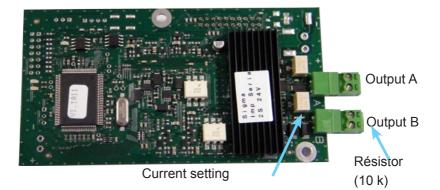

This option board does not require any programming. By default the time is the local time defined in the Sigma, with 1.2-second impulses, and the line is stopped.

Impulse generated from internal power (24V),

Connect the clock lines to the outputs A and B.

The current can be adjusted (from 50 to 100 mA) for each line, using the potentiometer next to each terminal strip.

The (10 K) resistor on each output terminal strip is designed to prevent the "line open" alarm message. It must be left if the line is not used.

Set the lines to "On" in the "Time outputs" technician menu (see page 36).

Resetting to the correct time can be carried out line by line.

In the time output management menu of the

technician menu, use the **b** key to move to "set dial" and validate with The following screen is displayed : Dials :

Enter the time of the clocks for each line (line A and B), and then validate with

Set the lines to "On".

You can view the various distribution lines of the board by selecting "view dial".

Remark: in the "Time outputs" technician menu, "DEL" mode is used only to uninstall the option board from the master clock.

Inpuls	66:1/2	11.2	\$
STHRT	displæ	dial	ck


A:00:00

B:00:00 ok

A:10:10

B:11:30


ok







14.7 relay option board

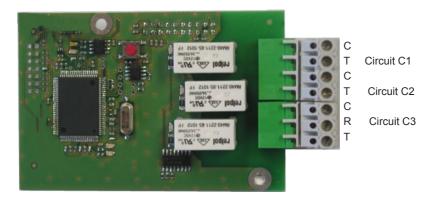


This option board does not require any software programming. It allows 3 relays to be added.


See the technician menu (circuit setting programming) on page 38.

Remark: in the time output management menu of the technician menu, "DEL" mode is used only to uninstall the option board from the master clock.

Examples of wiring

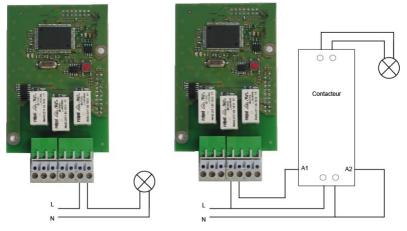

14.8 Option board with AFNOR input

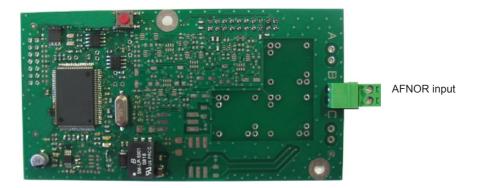

This option board does not require any software programming.

It allows to add an AFNOR synchronisation input. See "Time outputs" in the technician menu page36.

14.9 Three inputs option card



This card allows the addition of 3 external inputs.

Connect the lines carrying the external information to the inputs A, B and C. The parameter setting is accomplished with the PC software.

See paragraph "USB loading and backup" page 19.

To set the parameters of these inputs you must define:

The extension card number and its status (Run/Stop). The operating mode (ON, ON/OFF, OFF, Prog) of each input (A, B, and C).

ON, pressing once on the contact turns the input ON, ON/OFF pressing once toggles the input from one state to the other, OFF, pressing once turns the input OFF, Prog, pressing once activates the programming (switch from the Stop state to the Run state).

The selection of the involved circuits.

All the circuits, All the selected circuits, select the circuit(s) to be activated, All the circuits but the one selected, select the circuit(s) that must not be activated.

The duration of the activation of the circuit (ON).

Melody circuit, select the melody and the number of time that it must be played.

15) Technical characteristics

	Designation	Characteristics		
	Backup	Permanent backup of all parameters in case of mains failure.		
		Automatic resetting of receiver clocks to correct time after mains		
		restoration.		
	Time base	Quartz, accuracy 0.1 seconds per day between 20 and 25°.		
	Capacity	500 program steps per circuit.		
	Power supply	100-240 VAC 50/60 Hz ou 24 VDC, ou 36/72 VDC (selon le		
		modèle).		
cal	Maximum	100-240 VAC ; 0,8-0,55 A.		
Electrical	consumption	24 VDC ; 25 W.		
Ше		36-72 VDC ; 50 W.		
	Power supply terminal	Rack: rigid or flexible cable with end piece with cross section 1 ²		
	block	to 1.5 ²		
		Wall-mounted: rigid wire 1 ² to 1.5 ² bared 6 mm.		
	Other terminals	Cross section 1.5 ² maximum, bared 6 mm.		
	Electrical isolation	Class 1.		
	Mains power supply	TT or TN system.		
	system			
	Control of 3 relays	Programmable in weekly or annual mode		
	Control circuit (relay)	Galvanic isolation.		
	isolation			
	Circuit operating	Either SELV* or LV** with common phase (230 V maximum		
S	voltage	between the 2 circuits).		
Relays	Relay breaking	1A / 240 VAC.		
Re	capacity Usefulness of	1) Lituken contect closed		
		1) Lit when contact closed.		
	indicator light (of each circuit)	2) Used to indicate the current circuit programming.		
	Relay statuses	Standby/work on circuit 3.		
	Relay statuses	Normally open on circuits 1 and 2.		
	Synchronisation	Depending on model, on DCF, MSF or GPS antenna.		
	Minute or half minute	One 24 V 1 A output programmable in minutes, half minutes or		
	parallel polarised	seconds in local time or 24 V 1A LV power supply.		
outs	impulse distribution			
Outputs	D1D2 distribution	One output (D1 D2 uses the relays of circuits 1 and 2).		
	AFNOR coded time	One output, standard NFS 87 500A (no programming is		
	distribution	necessary) (SELV).		
	distribution	()))))))))))))))))))))))))))))))))))))		

	Protection index	Wall-m	ounted : IP41 / F	Rack : IP 20	
	Operating temperature	0 to 50	°C		
ਯ	Keypad locking	By acc	ess code		
Mechanical	Dimensions		WALL-MOUNT	ED version	19» RACK Version
cha		Width	220 r	nm	483 mm (1 width)
Me		Height	322 r	nm	44 mm (1 U)
		Depth	83 m	m	200 mm
	Weight		1.2 k	g	1.4 kg

* SELV: safety extra low voltage (voltage < 42.4 V peak or 60 V continuous).

**LV: low voltage > 42.4 V peak or 60 V continuous.

16) What to do if ...? Check that ...

What to do if?	Check that (see page 8 for references)
The green LED does not light up when the unit is switched on.	 Check that the mains is present (D). Check that the terminal strips (K) are correctly positioned on the printed circuit. Check that the flat cable (Q) of the keypad is correctly connected on the terminal strip on the printed circuit.
The mains is present but there is no secondary voltage.	>Check that the terminal strip is correctly positioned on the printed circuit. >Replace the transformer after checking that there is no short- circuit.
No message appears when the unit is switched on.	Check that the flat cable (Q) of the display is correctly connected on the terminal strip on the printed circuit.
Nothing happens when a key is pressed on the keypad.	 > It is possible that the key has not been pressed long enough. > Check that the flat cable (Q) of the keypad is correctly connected on the terminal strip on the printed circuit. > Check that the keypad is not locked (incorrect access code entered).
With an antenna connected, the "radio" pictogram is still flashing.	 Check that a radio synchronisation antenna is connected to the unit and that its LED is flashing. Wait at least 4 minutes.
Drift of the time base.	>Refer to the section on setting the time base drift (page 35).
Considerable drift (> 0.5 seconds per day) of the time base.	>Send the equipment back to the BODET maintenance department.
An alarm is displayed.	>To acknowledge the alarm, after setting the problem with this
	alarm, press the 🕨 button and confirm 💟.
	If the problem persists, call for Bodet technical support.

